

## Gasket Cleaning - V4000 Models

To clean the lower, non-removable gasket, unplug your appliance and then pull the drawer out to sponge clean.




To access the upper gasket and bag sensor hinges, open the drawer and gently flip your vacuum sealer completely over with the drawer open. Make sure you place the flipped appliance on a sturdy & secure workspace for support while cleaning.



Once flipped, with the drawer open, you will be able to see the inside of your vacuum sealer.

Locate the upper gasket and sponge clean.

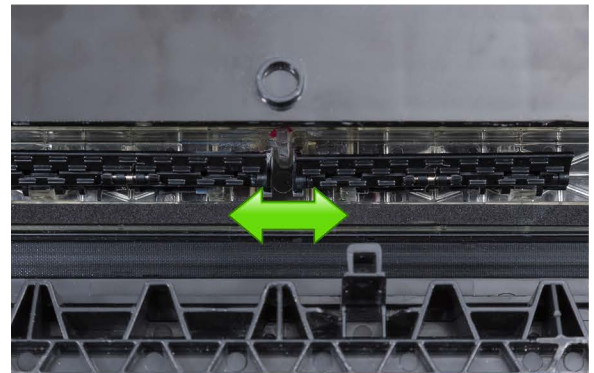

After the gaskets have been cleaned, gently clean the bag sensor hinges with damp paper towels to remove food & liquid debris.

The bag sensor hinges need to be kept clean in order to move freely without resistance in order to optimally operate .

