



# FoodSaver®

THE #1 VACUUM SEALING SYSTEM



## User Manual

for V2800 series appliances  
Model V2866

[www.foodsaver.com](http://www.foodsaver.com) 1-877-777-8042



# Table of Contents

- Important Safeguards and Tips ..... 1
- Welcome to FoodSaver® Vacuum Sealing System ..... 2
- Features: FoodSaver® V2800 Series ..... 3
- How to Make a Bag from a FoodSaver® Roll ..... 5
- How to Vacuum Package with FoodSaver® Bags ..... 6
- To Utilize Flip Storage ..... 6
- Guidelines for Vacuum Packaging ..... 7
- Storage Guide - Meat, Cheese, Vegetables, Fruits ..... 9
- Storage Guide - Baked Goods, Coffee, Snacks and Liquids ..... 10
- How to Vacuum Package with FoodSaver® Appliance ..... 11
- How to Open FoodSaver® Accessories After Vacuum ..... 11
- Care and Cleaning ..... 11
- Trouble-Shooting ..... 12
- Warranty ..... 14

## Important Safeguards & Tips

### Important Safeguards

**For your own safety, always follow these basic precautions when using a FoodSaver® appliance:**

1. Read the User Manual carefully for operating instructions. Read all instructions in this manual before use.
2. Do not use appliance on wet surfaces or outdoors.
3. To protect against electric shock, do not immerse any part of appliance, power cord or plug in water or other liquid. Unplug from outlet when not in use and before cleaning.
4. To disconnect, unplug power cord from electrical outlet. Do not disconnect by pulling on cord.
5. Do not operate appliance with a damaged power cord or plug. Do not operate appliance if it malfunctions or is in any way damaged. For details, contact Consumer Services at number listed below.
6. Use appliance only for its intended use.
7. Closely supervise children when using any electrical appliance. Do not allow appliance to be used as a toy.
8. **Caution:** A short power cord is provided to reduce risks from entanglement or tripping over a longer cord. An extension cord may be used when marked electrical rating is no less than electrical rating of this appliance. All cords should not drape over counter or tabletop where cords can be tripped over or pulled on unintentionally, especially by children.
9. Do not place on or near a hot gas or electric burner, or heated oven. Extreme caution must be used when moving products containing hot liquids.
10. Wait 20 seconds between seals to allow appliance to cool.



## Important Safeguards & Tips continued

WELCOME

### For Household Use Only SAVE THESE INSTRUCTIONS

#### Important Tips

1. Vacuum packaging is NOT a substitute for the heat process of canning. Perishables still need to be refrigerated or frozen.
2. For best results, use only with FoodSaver® Bags, Rolls, Containers and Accessories.
3. During the vacuum packaging process, small amounts of liquids, crumbs or food particles can be inadvertently pulled into the Vacuum Channel. Empty the Drip Tray after each use.
4. Avoid overfilling, always leave at least 3 inches of bag material between bag contents and top of bag. This allows room for the bag material to cinch tightly against the food and prevents the bag from pulling out of the Vacuum Channel during the sealing process. Then leave at least one additional inch of bag material for each time you plan to reuse bag.
5. Do not create your own side seams for a FoodSaver® Bag. These bags are manufactured with a special side seam, which is sealed all the way to the outer edge.

6. To prevent wrinkles in the seal when vacuum packaging bulky items, gently stretch bag flat while inserting bag into Vacuum Channel and before latching the unit shut.
7. When you are vacuum packaging items with sharp edges (dry spaghetti, silverware, etc.), protect bag from punctures by wrapping item in soft cushioning material, such as a paper towel. You may want to use a canister or Mason jar instead of a bag.
8. When using accessories, remember to leave one inch of space at top of canister or container.
9. Pre-freeze fruits and blanch vegetables before vacuum packaging for best results. See *Guidelines for Vacuum Packaging*.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this plug safety feature.

## Welcome to FoodSaver® Vacuum Sealing System

### Congratulations...

*You are about to enjoy the freshness benefits of FoodSaver®, The #1 Selling Brand of Vacuum Packaging Systems. For years, the FoodSaver® Vacuum Packaging System has helped millions of households keep food fresh longer in the refrigerator, freezer and pantry. The FoodSaver® system is designed to remove air and extend freshness up to five times longer than conventional storage methods. Keep your FoodSaver® appliance on your countertop, and you'll soon discover its convenience and versatility.*

### Free Gift with Registration!

Register now and you'll receive a free gift. It's our "thanks" to you for being a FoodSaver® customer.

Register online at:

[www.foodsaver.com/register](http://www.foodsaver.com/register).

You'll have access to special sale items for online registrants only!

**Questions?**  
Contact customer service at  
**877-777-8042**  
or visit [www.foodsaver.com](http://www.foodsaver.com).

**Do not return this product to place of purchase.**


[www.foodsaver.com](http://www.foodsaver.com) 1-877-777-8042

2




# Features: FoodSaver® V2800 Series

FEATURES

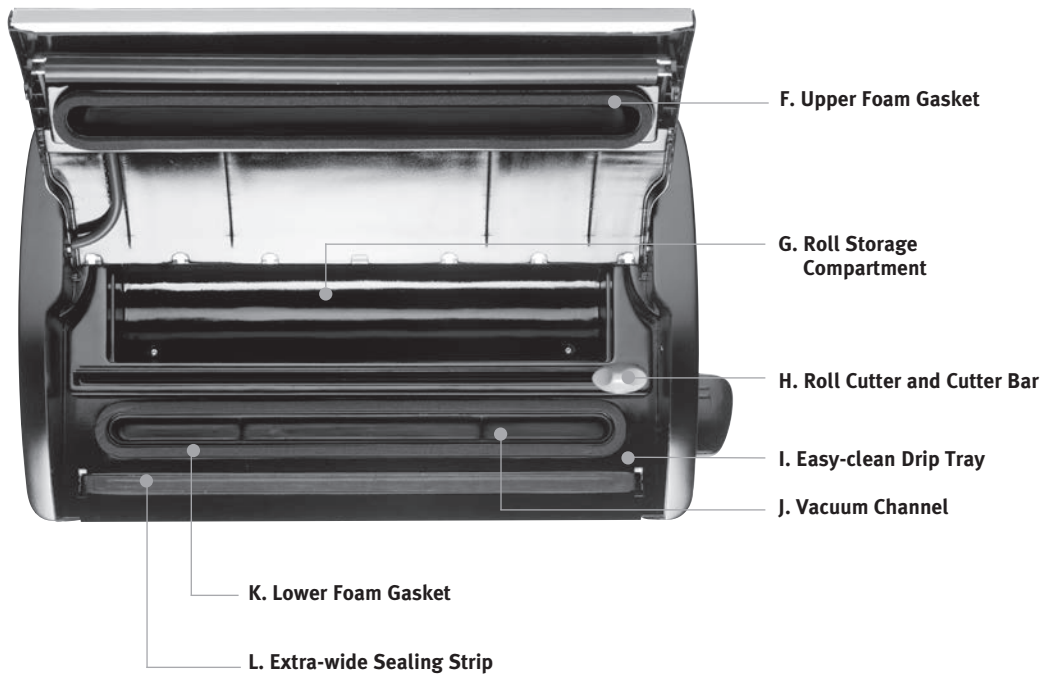



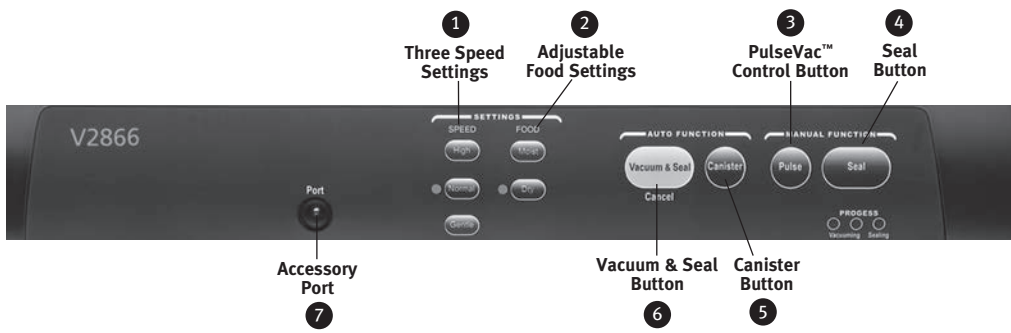

The user-friendly, control panel makes it easy for you to get the most out of your FoodSaver® System.

**1 Three Speed Settings**

When vacuum sealing delicate items, press Gentle Setting Button so that the gentle speed indicator light is illuminated. For more control you may press Seal Button at any time to stop vacuum and begin sealing process.

**NOTE:** Appliance will default to Normal speed when first turned on.

**2 Adjustable Food Settings**

Select food type to optimize the seal – Dry (normal seal time) for foods without liquid; Moist (longer seal time) for juicy foods.

**3 PulseVac™ Control Button**

Starts and stops vacuum to control air removal.

**4 Seal Button**

This button has three uses:

1. Press to create a seal when making bags from a FoodSaver® Roll.
2. Press to immediately stop the vacuum process and begin sealing the bag. This prevents crushing delicate items such as bread, cookies and pastries.
3. Press to create a seal on multilayer film bags (such as a potato chip bag) to keep food sealed airtight.

**5 Canister Button**

Press to achieve best vacuum for canisters and accessories. Push Canister Button to begin vacuum process. Motor will run until Vacuum Sealing Process is complete.

**6 Vacuum & Seal Button**

This button has two uses:

1. Press to vacuum package and seal food airtight. Appliance shuts off automatically.
2. Press to pause vacuum process at any point.

**7 Accessory Port**

For use with accessory hose, which can be used with all FoodSaver® Brand Accessories.



**Flip-up Storage**

The V2866 model flips upright for convenient, space-saving storage.



# How to Make a Bag from a FoodSaver® Roll


## HOW TO

1. Open appliance lid and place roll into Roll Storage Compartment.
2. Lift up Roll Cutter Bar. Place bag material below cutter bar.
3. Pull bag material to the outer edge of the Sealing Strip and lower the Cutter Bar to hold bag in place.
4. Close and lock the lid using the Latch.
5. Press Seal button.
6. When Seal Indicator Light turns off, sealing is complete. Unlock Latch and lift lid.
7. You now have one sealed end and need to cut the bag to the length you need. Pull out enough bag material to hold item to be vacuum packed, plus 3 inches.
8. Gently press and slide Roll Cutter across the length of the roll.

Now you are ready to vacuum package with your new bag (see below).



*Open Appliance*

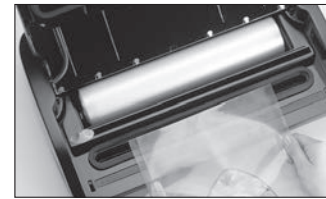

*Place Bag on Sealing Strip*



*Close and Latch Lid*



*Press Seal Button*



*Slide Roll Cutter*



# How to Vacuum Package with FoodSaver® Bags

1. Place item(s) in bag, allowing at least 3 inches of space between bag contents and top of bag.
2. Open appliance lid and place open end of bag into Vacuum Channel.
3. Close lid and use Latch to lock.
4. Press appropriate Food Setting Button – Choose *Moist* for juicy foods or *Dry* for foods without liquid. Appliance will default to *Dry* setting.
5. Press Vacuum & Seal Button to begin vacuum and sealing process. Motor will continue to run until bag is fully vacuumed, then will automatically seal.
6. When Seal Indicator Light turns off, unlock Latch, lift lid and remove bag. Refrigerate or freeze if needed. (See *FoodSaver Reference Guide* for food safety tips.)

**Note:** Let appliance cool down for 20 seconds after each use. Always store appliance with the Latch in the unlocked position.



Place Bag in Vacuum Channel



Close and Latch Lid



Press Vacuum & Seal Button

HOW TO

## To Utilize Flip Storage

1. Close the lid.
2. Turn Latch halfway to secure for storage (the halfway position locks appliance lid for storage without compressing the foam gasket and creating unnecessary wear and tear).
3. Push and hold Release Button on the right side of appliance.
4. Raise the front of appliance until it's in the upright position and it clicks.
5. Let go of the Release Button.
6. When ready to use again, press Release Button and lower front of appliance.





# Guidelines for Vacuum Packaging

## Vacuum Packaging and Food Safety

The vacuum packaging process extends the life of foods by removing most of the air from the sealed container, thereby reducing oxidation, which affects nutritional value, flavor and overall quality. Removing air can also inhibit growth of microorganisms, which can cause problems under certain conditions:

**Mold** – Easily identified by its fuzzy characteristic. Mold cannot grow in a low oxygen environment, therefore vacuum packaging can slow the growth of mold.

**Yeast** – Results in fermentation, which can be identified by smell and taste. Yeast needs water, sugar and a moderate temperature to grow. It can also survive with or without air. Slowing the growth of yeast requires refrigeration, while freezing stops it completely.

**Bacteria** – Results in an unpleasant odor, discoloration and/or soft or slimy texture. Under the right conditions, anaerobic bacteria such as *Clostridium botulinum* (the organism that causes Botulism) can grow without air and sometimes cannot be detected by smell or taste. Although it is extremely rare, it can be very dangerous.

To preserve foods safely, it is critical that you maintain low temperatures. You can significantly reduce the growth of microorganisms at temperatures of 40°F (4°C) or below. Freezing at 0°F (-17°C) does not kill microorganisms, but stops them from growing. For long-term storage, always freeze perishable foods that have been vacuum packaged, and keep refrigerated after thawing.

It is important to note that vacuum packaging is NOT a substitute for canning and it cannot reverse the deterioration of foods. It can only slow down the changes in quality. It is difficult to predict how long foods will retain their top-quality flavor, appearance or texture because it depends on age and condition of the food on the day it was vacuumed packaged.

**IMPORTANT: Vacuum packaging is NOT a substitute for refrigeration or freezing.** Any perishable foods that require refrigeration must still be refrigerated or frozen after vacuum packaging.

## Food Preparation and Reheating Tips

### Thawing and Reheating Vacuum Packaged Foods

Always thaw foods in either refrigerator or microwave — do not thaw perishable foods at room temperature.

To reheat foods in a microwave in a FoodSaver® Bag, always cut corner of the bag before placing it on a

microwave-safe dish. However, to avoid hot spots, do not reheat bone-in meat or greasy foods in microwave within a FoodSaver® Bag. You can also reheat foods in FoodSaver® Bags by placing them in water at a low simmer below 170°F (75°C).

### Preparation Guidelines for Meat and Fish:

For best results, pre-freeze meat and fish for 1-2 hours before vacuum packaging in a FoodSaver® Bag. This helps retain the juice and shape, and guarantees a better seal.

If it's not possible to pre-freeze, place a folded paper towel between meat or fish and top of bag, but below seal area. Leave paper towel in bag to absorb excess moisture and juices during vacuum packaging process.

**Note:** Beef may appear darker after vacuum packaging due to the removal of oxygen. This is not an indication of spoilage.

### Preparation Guidelines for Hard Cheeses:

To keep cheese fresh, vacuum package it after each use. Make your FoodSaver® Bag extra long, allowing one inch of bag material for each time you plan to open and reseal in addition to the 3-inch room you normally leave between contents and seal. Simply cut sealed edge and remove cheese. When you're ready to repackage the cheese, just drop it in bag and reseal.

**IMPORTANT: Due to the risk of anaerobic bacteria, Soft cheeses should never be vacuum packaged.**

### Preparation Guidelines for Vegetables:

Vegetables need to be blanched before vacuum packaging. This process stops the enzyme action that could lead to loss of flavor, color and texture.

To blanch vegetables, place them in boiling water or in the microwave until they are cooked, but still crisp. Blanching times range from 1 to 2 minutes for leafy greens and peas; 3 to 4 minutes for snap peas, sliced zucchini or broccoli; 5 minutes for carrots; and 7 to 11 minutes for corn on the cob. After blanching, immerse vegetables in cold water to stop the cooking process. Finally, dry vegetables on a towel before vacuum packaging.

**Note:** All vegetables (including broccoli, brussels sprouts, cabbage, cauliflower, kale, turnips) naturally emit gases during storage. Therefore, after blanching, they must be stored in freezer only.

When freezing vegetables, it is best to pre-freeze them for 1-2 hours or until solidly frozen. To freeze vegetables in individual servings, first place on a



# Guidelines for Vacuum Packaging

baking sheet and spread them out so they are not touching. This prevents them from freezing together in a block. Once they are frozen, remove from baking sheet and vacuum package vegetables in a FoodSaver® Bag. After they have been vacuum packaged, return them to the freezer.

**IMPORTANT: Due to the risk of anaerobic bacteria, Fresh mushrooms, onions, & garlic should never be vacuum packaged.**

### Preparation Guidelines for Leafy Vegetables:

For best results, use a canister to store leafy vegetables. First wash the vegetables, and then dry with a towel or salad spinner. After they are dried, put them in a canister and vacuum package. Store in refrigerator.

### Preparation Guidelines for Fruits:

When freezing soft fruits or berries, it is best to pre-freeze them for 1-2 hours or until solidly frozen. To freeze fruit in individual servings, first place on a baking sheet and spread them out so they are not touching. This prevents them from freezing together in a block. Once they are frozen, remove from baking sheet and vacuum package fruit in a FoodSaver® Bag. After they have been vacuum packaged, return them to the freezer.

You can vacuum package portions for baking, or in your favorite combinations for easy fruit salad all year round. If storing in the refrigerator, we recommend using a FoodSaver® Canister.

### Preparation Guidelines for Baked Goods:

To vacuum package soft or airy baked goods, we recommend using a FoodSaver® Canister so they will hold their shape. If using a bag, pre-freeze for 1-2 hours or until solidly frozen. To save time, make cookie dough, pie shells, whole pies, or mix dry ingredients in advance and vacuum package for later use.

### Preparation Guidelines for Coffee and Powdery Foods:

To prevent food particles from being drawn into vacuum pump, place a coffee filter or paper towel at top of bag or canister before vacuum packaging. You can also place the food in its original bag inside a FoodSaver® Bag, or use a FoodSaver® Universal Lid with the original container to vacuum package.

### Preparation Guidelines for Liquids:

Before you vacuum package liquids such as soup stock, pre-freeze in a casserole dish, loaf pan or ice cube tray until solid. Remove frozen liquid from pan and vacuum package in a FoodSaver® Bag. You can stack these “frozen bricks” in your freezer. When you’re ready to use, just cut corner of bag and place in a dish in microwave or drop into water at a low simmer, below 170°F (75°C).

To vacuum package non-carbonated bottled liquids, you can use a FoodSaver® Bottle Stopper with the original container. Remember to leave at least one inch of room between contents and bottom of Bottle Stopper. You can re-seal bottles after each use.

### Preparation Guidelines for Make-ahead Meals, Leftovers and Sandwiches:

Efficiently store your make-ahead meals, leftovers and sandwiches in the stackable, lightweight FoodSaver® containers. They are microwaveable, top rack dishwasher safe and come with a custom adaptor. The lightweight containers will be ready to head off to the office or school when you are!

### Preparation Guidelines for Snack Foods:

Your snack foods will maintain their freshness longer when you vacuum package them. For best results, use a FoodSaver® Canister for crushable items like crackers.

### Vacuum Packaging Non-Food Items

The FoodSaver® vacuum packaging system also protects non-food items from oxidation, corrosion and moisture. Simply follow the directions to vacuum package items using FoodSaver® Bags, Canisters and Accessories.

To vacuum package silver, wrap fork tines in soft cushioning material, such as a paper towel, to avoid puncturing bag. Your FoodSaver® Bags are ideal for outdoor excursions. For camping and hiking, keep your matches, maps and food dry and compact. To have fresh water for drinking, simply fill a FoodSaver® Bag with ice, seal it and when needed, let the ice pack melt. If you’re going sailing or boating, vacuum package your food, film and a dry change of clothes. Just remember to bring scissors or a knife to open the bag.

To keep emergency kits safe and dry, vacuum package flares, batteries, flashlights, matches, candles and other necessities. Your emergency items will stay dry and organized in your home, car or boat.

VACUUM PACKAGING





# Storage Guide

## Meat, Cheese, Vegetables, Fruits

Foods	Where to Store	Recommended FoodSaver® Bag/Accessory	Storage Life with FoodSaver® System	Normal Storage Life
<b>Meat</b>				
Beef, Pork, Lamb	Freezer	FoodSaver® Bag	2-3 years	6 months
Ground Meat	Freezer	FoodSaver® Bag	1 year	4 months
Poultry	Freezer	FoodSaver® Bag	2-3 years	6 months
Fish	Freezer	FoodSaver® Bag	2 years	6 months
<b>Hard Cheeses</b> ( Do not vacuum package soft cheese )				
Cheddar, Swiss	Refrigerator	FoodSaver® Bag, Canister	4-8 months	1-2 weeks
Parmesan	Refrigerator	FoodSaver® Bag, Canister	4-8 months	1-2 weeks
<b>Vegetables</b> ( Do not vacuum package fresh mushrooms, onions & garlic )				
Asparagus	Freezer	FoodSaver® Bag	2-3 years	8 months
Broccoli, Cauliflower	Freezer	FoodSaver® Bag	2-3 years	8 months
Cabbage, Brussels Sprouts	Freezer	FoodSaver® Bag	2-3 years	8 months
Corn (cob or kernel)	Freezer	FoodSaver® Bag	2-3 years	8 months
Green Beans	Freezer	FoodSaver® Bag	2-3 years	8 months
Lettuce, Spinach	Refrigerator	FoodSaver® Canister	2 weeks	3-6 days
Snow Peas, Snap Peas	Freezer	FoodSaver® Bag	2-3 years	8 months
<b>Fruits</b>				
Apricots, Plums	Freezer	FoodSaver® Bag	1-3 years	6-12 months
Peaches, Nectarines	Freezer	FoodSaver® Bag	1-3 years	6-12 months
<b>Softer Berries</b>				
Raspberries, Blackberries	Refrigerator	FoodSaver® Canister	1 week	1-3 days
Strawberries	Refrigerator	FoodSaver® Canister	1 week	1-3 days
<b>Harder Berries</b>				
Blueberries	Refrigerator	FoodSaver® Canister	2 weeks	3-6 days
Cranberries	Refrigerator	FoodSaver® Canister	2 weeks	3-6 days
Huckleberries	Refrigerator	FoodSaver® Canister	2 weeks	3-6 days



# Storage Guide

## Baked Goods, Coffee, Snacks and Liquids

Foods	Where to Store	Recommended FoodSaver® Bag/Accessory	Storage Life with FoodSaver® System	Normal Storage Life
<b>Baked Goods</b>				
Bagels, Bread, Pastries	Freezer	FoodSaver® Bag	1-3 years	6-12 months
<b>Nuts</b>				
Almonds, Peanuts	Pantry	FoodSaver® Bag, Canister	2 years	6 months
Sunflower Seeds	Pantry	FoodSaver® Bag, Canister	2 years	6 months
<b>Coffee</b>				
Coffee Beans	Freezer	FoodSaver® Bag	2-3 years	6 months
Coffee Beans	Pantry	FoodSaver® Bag, Canister	1 year	3 months
Ground Coffee	Freezer	FoodSaver® Bag	2 years	6 months
Ground Coffee	Pantry	FoodSaver® Bag, Canister	5-6 months	1 month
<b>Prepared Liquids</b>				
Sauces, Soups, Stews	Freezer	FoodSaver® Bag	1-2 years	3-6 months
<b>Bottled Liquids</b>				
Oils	Pantry	FoodSaver® Bottle Stopper	1-1 1/2 years	5-6 months
<b>Dry Foods</b>				
Beans, Grains	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
Pasta, Rice	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
<b>Powdery Foods</b>				
Dry Milk	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
Dried Coconut	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
Flour	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
Sugar, Brown Sugar	Pantry	FoodSaver® Bag, Canister	1-2 years	6 months
<b>Snack Foods</b>				
Chips	Pantry	FoodSaver® Canister	3-6 weeks	1-2 weeks
Cookies, Crackers	Pantry	FoodSaver® Canister	3-6 weeks	1-2 weeks

STORAGE GUIDE

## How to Vacuum Package with FoodSaver® Accessories

1. Prepare container according to *FoodSaver® Accessory Guidelines*.
2. Insert one end of Accessory Hose into Accessory Port on appliance. Insert other end into port on accessory. Twist tab on Accessory Hose while inserting to ensure a tight fit.
3. Close lid, rotate Latch, press Vacuum & Seal Button
4. When motor and Indicator Light turn off, vacuum process is complete. Note that the appliance will still go through sealing cycle even when vacuuming an accessory. You will hear Motor shut off and then the sealing cycle will begin.
5. Gently twist and remove Accessory Hose from accessory and appliance.
6. To test vacuum, simply tug on accessory lid. It should not move.

**Note:** For important tips on using accessories with different foods, please refer to the *FoodSaver® Reference Guide*.

## How to Open FoodSaver® Accessories after Vacuum Packaging

### FoodSaver® Vacuum Packaging Canisters (without large knob on lid)

To release vacuum and open, push gray rubber button on lid.

### FoodSaver® Bulk Canisters and Quick Marinators (with large knob on lid) and Universal Lids.

To release vacuum and open, turn knob on lid to Open.

### FoodSaver® Jar Sealer with Mason Jars

For use with Ball® and Kerr® brand Mason jars.

**Important:** Do NOT use screw bands when vacuum packaging jars. To open, wedge spoon between Mason jar lid and highest part of threaded rim. Twist spoon gently to release vacuum.

### FoodSaver® Bottle Stoppers

To release vacuum and open, twist and pull up on Bottle Stopper.

## Care and Cleaning

### To Clean Appliance:

Remove Power Cord from electrical outlet.

**WARNING:** Do not immerse in liquid.

Check Gaskets and around Drip Tray to make sure they are free from food materials. Wipe off Gasket with warm soapy cloth if needed. Upper and Lower Gaskets may be removed for cleaning. Clean with warm, soapy water.

The Removable Drip Tray makes cleanup easy when small amounts of liquids are inadvertently pulled into the Vacuum Channel during vacuum process.


Empty Drip Tray after each use. Wash in warm soapy water or place in top rack of dishwasher. Dry thoroughly before re-inserting into the appliance.

Always leave lid latch in open position.

**Never store lid in latched position as gaskets may become compressed.**

When appliance is left in closed position, the Gaskets become compressed and the unit may not function properly.

Remove All Food Around Gaskets

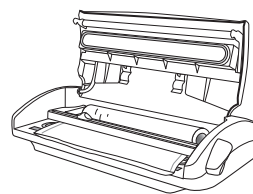

Lift Drip Tray Out



# Trouble-Shooting

TROUBLE-SHOOTING

Problem	Solution
Red Seal LED Flashing	<ul style="list-style-type: none"> <li>• Unit is overheated. Always allow 20 seconds between seals. Under heavy usage, appliance will shut off automatically and Red Light will flash. Wait for 20 min for unit to cool off.</li> <li>• Always wait 20 seconds between seals.</li> <li>• Latch has been left in closed position: Gaskets may be compressed. Unlatch and allow 10 to 20 minutes for Gaskets to expand.</li> <li>• Vacuum pump running more than 120 seconds. Under heavy usage, appliance will shut off automatically and Red Light will flash. See next section <i>Vacuum Pump is running, but bag is not evacuating</i>.</li> </ul>
Vacuum Pump is running, but bag is not evacuating	<ul style="list-style-type: none"> <li>• If making a bag from a roll, make sure one end of bag is sealed. See <i>How to Make a Bag from a FoodSaver® Roll</i> on page 5.</li> <li>• Adjust the bag and try again. Make sure the open end of the bag is down inside the Vacuum Channel.</li> <li>• Check for wrinkles in bag along Sealing Strip. To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into Vacuum Channel.</li> <li>• Open unit and make sure Gaskets are inserted properly and there are no foreign objects, dirt or debris on the Upper or Lower Gasket (See <i>Care and Cleaning</i> page 11).</li> <li>• Latch has been left in closed position: Gaskets may be compressed. Unlatch and allow 10 to 20 minutes for Gaskets to expand.</li> <li>• Make sure the accessory hose is not attached to accessory port.</li> <li>• Make sure the lid is latched down all the way. If the Latch does not catch the lid and bring it down, there will be a leak between the Gaskets.</li> </ul>
Gasket is loose or has a tear	<ul style="list-style-type: none"> <li>• Take out the Gasket, clean it and reinsert the Gasket into the Vacuum Channel (See <i>Care and Cleaning</i> page 11).</li> <li>• Call 877-777-8042 or visit website for replacement.</li> </ul>
Bag is not sealing properly	<ul style="list-style-type: none"> <li>• Too much liquid in bag, freeze before vacuuming.</li> <li>• Check for food debris around seal area. If present, take out the Gasket, clean it and reinsert the Gasket into the Vacuum Channel (See <i>Care and Cleaning</i> page 11).</li> <li>• Bag has wrinkles: To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into Vacuum Channel.</li> </ul>
No lights on the control panel	<ul style="list-style-type: none"> <li>• Make sure unit is plugged in.</li> <li>• Make sure wall outlet is functional.</li> <li>• Make sure lid is all the way down, and the Latch is in the locked position.</li> </ul>



## Trouble-Shooting cont.

Problem	Solution
Nothing happens when Latch is closed and button is pressed	<ul style="list-style-type: none"> <li>• Make sure unit is plugged in.</li> <li>• Make sure wall outlet is functional.</li> <li>• Open Latch, make sure lid is all the way down, re-latch lid.</li> </ul>
Cannot insert bag into machine	<ul style="list-style-type: none"> <li>• Make sure there is enough bag material to reach center of drip tray. Always allow three inches (7.62 mm) extra space to allow the bag to seal tightly around food contents.</li> <li>• Gently stretch bag flat while inserting. Insert bag CURL DOWN into Vacuum Channel.</li> </ul>
Air was removed from the bag, but now air has re-entered	<ul style="list-style-type: none"> <li>• Examine the seal. A wrinkle along the seal may cause air to re-enter the bag. To prevent wrinkles in the seal, gently stretch bag flat while inserting bag into vacuum channel.</li> <li>• Sometimes moisture or food material (such as juices, grease, crumbs, powders, etc.) along seal prevents bag from sealing properly. Cut bag open, wipe top inside of bag and reseal.</li> <li>• Sharp food items may have punctured bag. Use a new bag if there is a hole. Cover sharp food items with a soft cushioning material, such as a paper towel, and reseal.</li> <li>• Fermentation or the release of natural gases from inside the foods may have occurred. When this happens, food may have begun to spoil and should be discarded.</li> </ul>
Bag melts	<ul style="list-style-type: none"> <li>• Sealing Strip may have become too hot. Always wait at least 20 seconds for appliance to cool down before you vacuum package another item.</li> <li>• Use FoodSaver® brand bags. Our FoodSaver® Bags and Rolls are specially designed for FoodSaver® units.</li> </ul>
If you need further assistance:	<ul style="list-style-type: none"> <li>• Call Consumer Services at <b>1-877-777-8042</b>.</li> <li>• For additional tips and answers to frequently asked questions, go to <b><a href="http://www.foodsaver.com/Support.aspx">www.foodsaver.com/Support.aspx</a></b></li> </ul>





# 5 Year Limited Warranty

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively “JCS”) warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This limited warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center or use of this product with non-FoodSaver® branded bags and/or rolls. Further, this limited warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

### What are the limits on JCS’s Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

### How to Obtain Warranty Service

#### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.877.777.8042 and a convenient service center address will be provided to you.

#### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1.877.804.5383 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

### PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

For inquiries regarding recycling and proper disposal of this product, please contact your local waste management facility

www.foodsaver.com 1-877-777-8042

WARRANTY



Registering your appliance is quick and easy at [www.foodsaver.com/register](http://www.foodsaver.com/register). If you register on our website, you will have the opportunity to receive special bag and accessory introductory offers. Refer to the registration card inside the box.

For important safety information and helpful tips, please visit us at [www.foodsaver.com](http://www.foodsaver.com) to get tips on vacuum sealing and order FoodSaver® brand accessories, bags and rolls, or call 1-877-777-8042 (U.S.).

©2015 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Printed in China

SPR-030515-123P

P.N. 181310

**Spark\*  
Creative  
Group**™

**Job Name:** FoodSaver\_V2866\_BedBath\_IB  
**Date:** 10.12.14  
**Job #:** 92-0215-123P  
**File Name:** 123P\_fs\_V2866\_IB.indd  
**Client:** Jarden/FoodSaver

Color Chart:



**Notes:**

4 color/1 cover  
1/1 inner pages

Please contact Spark Creative Group with any questions regarding this artwork.



[create@sparkfl.com](mailto:create@sparkfl.com)  
+1 561 314 1355 *office*  
+1 561 314 1356 *facsimile*

902 Clint Moore Road  
Suite 214  
Boca Raton, Florida 33487

[getyourspark.com](http://getyourspark.com)